# Shrink-fit Heater **HEAT ROBO**

holder life

Shrink-fitting temperature is comparatively low, about 300°C[570°F], which is safer for the holders.

Affordable and compact design for simple shrink fitting.

**Induction Heater** 





 




# HEΛT ROBO Baby

- Compact Affordable
- No risk of overheating





Compact A4 size∼

Easy operation







0

0





×

0

× ×

×

	電磁5000\$	電磁2500	電磁12005	
CODE	HRD-02SH HRD-03		HRD-01S	
Heating method	Induction type			
Rated power consumption	5000w	2500w	1200w	
Rated voltage	3 phases 200-240 v	Single phase 200-240v	100v	
Cutter dia.	φ <b>3~32</b> [1/8″~1]	<b>φ3~16</b> [1/8″~5/8]	φ <b>3~12</b> [1/8″~1/2]	
Heating time (dia 6)	18 sec. (Auto setting)	<b>25</b> sec.	18 sec.	
Cooling method*	(1min.)			
Size (wxDxH) mm	340×470×750 230×540×55			

Baby 3000S	Baby 1200S	Baby 1000		
HRB-03S	HRB-02S	HRB-01		
Hot air type				
3000w	1200w	1000w		
Single phase 200 v	100v			
φ3~32[1/8"~1]	φ <b>3~12</b> [	[1/8″~1/2]		
70 sec.	120 sec.	180 sec.		
(5min.)	<b>A</b>			
430×330×600	370×260×590	320×160×410		

Δ

0

※About cooling method [O]: Air cooling using factory air. [▲]: Cooling operation using air cooling capability of a hot air heater.

#### ■Compatibility table by holder type

MONO series	0	Δ	Δ
2 PIECE type	0	0	0
UNO	0	0	0
HYPER VERSION	0	×	×
STRAIGHT arbor	0	Δ	Δ

STRAIGHT arbor	0	Δ	Δ	0	Δ	
HYPER VERSION	0	×	×	0	×	
JNO		O	O		0	

 $\begin{tabular}{ll} \hline \end{tabular} \begin{tabular}{ll} \end{tabular} : Available & $[$X$] : Not available & $[$\Delta$] : Refer to size chart \\ \hline \end{tabular}$ 

\*Please verify compatibility for specific holders.

# **INDUCTION HEATER**

# DENJI 磁**5000S**

CODE	Size (W×D×H)	Rated voltage	Kg
HRD-02SH	340×470×750 mm	3 phases 200-240v	30


#### **■**Option

- •Heating coil(HRD2-CL) •Coil stand
- •Please choose parts on P.15-17

#### ■Std. Access.

●Heat-resistant gloves ●Tweezers

- •Use type HSB/HSC for cutter stopper.
- Compressed air required: 0.5MPa (air-consumption volume: 245ℓ/min)
- •The customer should prepare the following items : auxiliary parts including the air tube (O.D.: 8mm.) an air filter and a coupler.

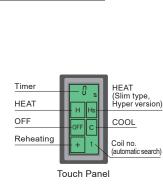



₽ CE

Max. Cutter dia. φ**3~32**[1/8~1"]

5000w

Cutter dia.  $\phi$ 6

Heating  $18 \, \text{sec.}$ Air-cooling 1 min.

#### Heating coil (Option)

CODE	Heating coil No.	Holder I.D.	Heating time (Auto setting)	φC	н
HRD2-CL1	1	φ3~ 6 [1/ 8" ~ 1/4]	18 sec.	25	33
-CL2	2	φ7~12*1 [5/16" ~ 1/2]	28 sec.	35	42
-CL3	3	φ16, 20 <sup>%2</sup> <sup>%3</sup> [5/ 8", 3/4"]	28 sec.	45	47
-CL4	4	φ25 [1"] MONO series •MONO 3°[A50M-SLRB20, F63-SLFB20]	40 sec.	55	57
-CL5	5	MONO series •MONO 3°[SLRB•SLFB8/10/12/16-M22] 35 sec. F			g. 1
-CL6	6	HYPER VERSION (•Short type(All sizes) •Heavy-duty type [ φ12, 16]) 40 sec.			47
-CL7	7	φ32, HYPER VERSION (•Heavy-duty type [ φ20, 25])	60 sec.	70	67

#### ■Std. Access.

•Protection sheet for heating coil

- •To protect the heating coil,don't heat a holder without using a coil protection sheet.
- When ordering, please note that holders for coil 5, 6, or 7 cannot be heated by 2, 3, or 4.
   \*\*1 Use the coil, No.5 for SLRB•SLFB8/10/12-M22.
- \*2 Use the coil, No.5 for SLRB•SLFB16-M22.
- #3 Use the coil, No.4 for A50M-SLRB20, E50-SLRA16-60-M22, E50-SLRA20-65-M22,F63-SLFB20

#### Protection sheet for heating coil

 
CODE	Coil
HRD2-DN1	HRD2-CL1
-DN2	-CL2
-DN3	-CL3
-DN4	-CL4
-DN5	-CL5
-DN6	-CL6
-DN7	-CL7

•The coil protection sheet is a consumable part. Replace the coil protection sheet(option) when you see that it is colored or distorted by the heat.

#### Coil stand



※Heating coils are not included.



Cross-section view

Protection heating coil

OTHERS

# 玄**2500**

One Heating Coil supports dia.3-16mm of shrink-fit holder SLIMLINE. You can escape the inconvenience of changing heating coils.

CODE	AREA	Holder I.D.	Size (W×D×H)	Rated voltage	Kg
HRD-03-L	Japan,	φ3~16 [1/8" ~ 5/ 8]	340	Single-phase	30
-s	North America	φ3~ 8 [1/8" ~ 5/16]	× 470	200-240∨	
-LSE	Europe,	φ3~16	× ×		
-SSE	Asia	φ3~ 8	750 mm		

#### **■**Option

•Please choose parts on P.15-17

#### ■Std. Access.

- •Heat-resistant gloves •Tweezers
- •Protection sheet for heating coil

- •Use type HSB/HSC for cutter stopper.
- •Compressed air required: 0.5MPa
- •The customer should prepare the following items: auxiliary parts including the air tube (O.D.: 8mm.)

shrink the HYPER version

#### Holder I.D. $1: \phi \ 3 \sim 5$ $2: \phi \ 6 \sim 9$ $3: \phi \ 10 \sim 16$ 1 2 3 Timer 0 HEAT (Slim type) HEAT H Hs OFF COOL OFF С Reheating

Touch Panel



Max. Cutter dia

₽ CE

φ**3~16**[1/8~5/8"]

Rated power consumption 2500w

Cutter dia.  $\phi$ 6 Heating 25 sec.

> Air-cooling 1 min.

\*HRD-03-S/SSE is designed for dia.3 to 8mm, you can shrink-in and out in a short time.

HYPER VERSION

φ3~12[1/8~1/2"] Rated power consumption 1200w

Cutter dia. ø6 Heating 18 sec.

₽ CE

Max. Cutter dia

1 min.

- (air-consumption volume: 245l/min)
- an air filter and a coupler.

•The HEATROBO DENJI 2500 (HRD-03) is unable to

#### Protection sheet for heating coil

CODE	Shrink-fit Heater
HRD3-DN1	HRD-03-L/LSE
-DN2	-S / SSE

#### ■Note

The coil protection sheet is a consumable part. Replace the coil protection sheet(option) when you see that it is colored or distorted by the heat.





CODE	AREA	Size (W×D×H)	Rated voltage	Kg
HRD-01S	Japan	230×410×550 mm	100v	14
-01S-120NA	North America	230×540×550 mm	120∨	19
-230AS	Asia		Single phase 230V	

### **■**Option

Please choose parts on P.15-17

#### ■Std. Access

- Heating coil(HRD-CL)
- •Heat-resistant gloves
- Tweezers

#### ■Note

- •Use type HSB/HSC for cutter stopper.
- •Compressed air required: 0.5MPa (air-consumption volume: 245l/min)
- •The customer should prepare the following items : auxiliary parts including the air tube (O.D.: 8mm.) an air filter and a coupler.
- A transformer is required in Europe. Please consult MST about the details of the transformer.

#### ■Caution

- •The HEATROBO DENJI 1200S (HRD-01S) is unable to shrink certain holders. For details, refer to P.249.
- •The HEATROBO DENJI 1200S (HRD-01S) is unable to shrink the HYPER version.

#### Heating coil


CODE	Heating Coil No.	Holder I.D.	Heating time	φC
HRD-CL1	1	φ3~ 6 [1/ 8" ~ 1/4]	18 sec.	18
-CL2	2	φ7~12 [5/16" ~ 1/2]	33 sec.	28

#### ■Std. Access.

•Protection sheet for heating coil

#### ■Caution

•To protect the heating coil,don't heat a holder without using a coil protection sheet.

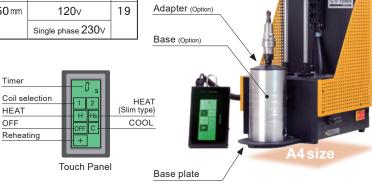

Protection sheet for heating coil

**Heating Coil** 

Air-cooling

### Protection sheet for heating coil

_		
	CODE	Coil
	HRD-DN1	HRD-CL1
	-DN2	-CL2

•The coil protection sheet is a consumable part. Replace the coil protection sheet(option) when you see that it is colored or distorted by the heat.



## **HOT AIR HEATER**

# Baby 3000S

CODE	Area	Size (W×D×H)	Rated voltage	Kg
HRB-03S	Japan	430	Single phase 200 v	9.5
-03S-230NA	North America	× 330	Single phase 230 v	
-230EU	Europe	×		
-230AS	Asia	600mm		

- ■Option
- φ70 Nozzle 
   •Please choose parts on P.15-17.
- ■Std. Access.
  - ●Safety timer ●Heat-resistant gloves ●Tweezers
- ■Note
- •Compressed air required: 0.5MPa(air-consumption volume: 245 ℓ/min)
- •Prepare an air tube (O.D.:8mm) and a connection coupling.

### ■ Shrink-fit heater with the safety timer.

Prevent accidents caused by leaving the heater on.


CODE	Area	Size (W×D×H)	Rated voltage	Kg
HRB-03ST	Japan	430	Single phase 200 V	9.7
-03ST-230NA	North America	330	Single phase 230 v	
-230EU	Europe	×		
-230AS	Asia	600mm		

#### ₽ 470 Nozzle

For MONO 3° SLRB32 Hyper version (except BT30),  $\phi$ 70 nozzle replacement is required





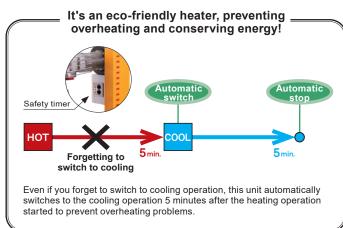



CODE	Area	Size (W×D×H)	Rated voltage	Kg
HRB-02S	Japan	370×260×590mm	100∨	8.0
-02S-120NA	North America	370×200×390mm	120 v	

- **■**Option
- Please choose parts on P.15-17.
- ■Std. Access.
- ●Timer ●Heat-resistant gloves ●Tweezers
  ■Note
  - •Some holders cannot be used.(P.15)



CODE	Area	Size (W×D×H)	Rated voltage	Kg
HRB-01	Japan	340×160×410 <sub>mm</sub>	100∨	3.5

- **■**Option
  - •Please choose parts on P.15-17.
- ■Std. Access.
- ●Adapter(ADH-SLK) ●Timer ●Nozzles, 2 pieces (HNZ-17, HNZ-22)
- Heat-resistant gloves
   Tweezers
- ■Note
  - A transformer is required in other volfage.
     Please consult MST about the details of the transformer.

# Option



BAA-01



### Examples of typical uses







### ■ Adapter

0005	B	Holder			Shrink-Fit Heater mo			nodel for Use		
CODE	Dimensions		Туре	Screw size	HRD-02SH	HRD-03	HRD-01S	HRB-03S	HRB-02S	HRB-01
	M 6 M 8 M10	2 PIECE	6 type	М6	0	0	0	0	0	0
		type SLIMLINE	8 type	М6						*Adapter
ADH-SLK		collet	12 type	M10						(ADH-SLK) is included.
ADH-SLK			ST10	М6						No need to purchase base
	φ88 φ88	STRAIGHT arbor	ST12	М8						(BAA-01) for 2 piece collet type 12.
	U.ONG		ST16/20/25	M10						,,
ADH-HSK25	E25= $\phi$ 14	MONO 3°	E25		0	Δ	Δ	0	Δ	×
-HSK32	E32 = $\phi$ 17 E40 = $\phi$ 21 E50 = $\phi$ 26	MONO CURVE	E32				*Some holders cannot be used. Please refer to the dimensional		%Some holders cannot be used.	
-HSK40E		UNO	E40				sheet.		(max.)	
-HSK40A		HYPER VERSION	A40						м	
-HSK50	0.8kg		A50 / E50 /	F63					Available	
-40	\$63.5 0.6kg \$\phi_{\phi 88}\$		BT40 / A63 F63 / F80 / F DN40 / CT40						dimension C=Max.	
-50	0.5kg \$\displaystyle{\psi}\$ \phi 100.5 \$\displaystyle{\psi}\$ \phi 107		BT50 / A100 DN50 / CT5							
-15TR	15TR=φ19.3 →   → S20T=φ22.5 □		15TR3							
-S20TR	BT30=\$32		RS20 / S201	ΓR						
-втзо	0.9kg \$\display \text{\$\phi 88}\$		BT30							
	M10 \	STRAIGHT arbor	ST16/20/25	M10	0	Δ	Δ	0	0	×
BAS-01	M16 M24		ST32	M16			Some holders cannot be used. Please refer to the dimensional			
	0.7kg		ST42	M24			sheet.			
-02	\$10~42 \$\frac{10}{24\kg}\$\$\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\		Carbide Sh ST C	ank						

[ O ] : Available

[ X ]: Not available

[  $\triangle$  ] : Restricted use

ONO

 
OTHERS

Technical Information

#### ■ Cutter Stopper

Used as a stopper in the holder when shrink fitting or removing a cutting tool.

#### HSAtype (Coil Spring Type)



CODE	φD	Set Contents(Q'ty)
HSA-D [Ex:HSA-6]	3, 3.175 [1/8"], 4, 5, 6, 7, 8, 9, 10, 11, 12, 16, 20, 25, [3/16", 1/4", 5/16", 3/8", 1/2"]	Each size 10 ea. /SET
-E	3, 4, 6, 8, 10, 12	1ea.,6piecesintotal
-F	3, 4, 5, 6, 7, 8, 9, 10, 11, 12	1 ea. , 10 pieces in total
-EF	3, 4, 5, 6, 8, 10, 12, 16, 20, 25	1 ea. , 10 pieces in total

#### ■Caution

•HSA type cannot be used with HEAT ROBO DENJI.

### ■ HSB<sub>type</sub> (Plate Spring Type)




CODE	φD	Set Contents(Q'ty)
HSB-D [Ex: HSB-6]	3, 3.175 [1/8"], 4, 5, 6, 7, 8, 9, 10, 11, 12, 16, 20, 25, 32, [3/16", 1/4", 5/16", 3/8", 1/2", 5/8", 3/4", 1"]	1 ea.
-E	3, 4, 6, 8, 10, 12	1ea.,6piecesintotal
-F	3, 4, 5, 6, 7, 8, 9, 10, 11, 12	1 ea. , 10 pieces in total
-EF	3, 4, 5, 6, 8, 10, 12, 16, 20, 25	1 ea. , 10 pieces in total


#### ■ HSC<sub>type</sub> (Slit Collet Type)




CODE	φυ
HSC-D [Ex:HSC-6]	3, 3.175[1/8"], 4, 6
_	



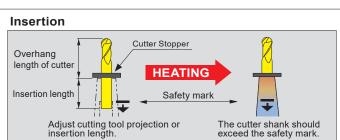


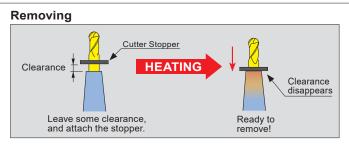

#### Cutter Pliers

 



 

### Stopper Pliers



HSB type

#### Cutter Tray

Cooling Tray for heated cutting tools after removal from a holder

CODE	
SDH-01	

Size:170×170 (mm)

#### Heat-resistant gloves

For additional order

CODE	NOTE
HTB-01	_
-01-R	Right Hand
-01-L	Left Hand




#### Cutter Adjuster

Simply adjustment for cutting tool projection and insertion length.

(1) Scale

CODE		φD	L
HAJ-3	3		10~ 30
-3.175	3.175	5 [1/8"]	
-4	4		13~ 30
-3/16		[3/16"]	
-6	6		19~ 45
-1/4		[1/4"]	
-8	8	[5/16"]	21~ 55
-10	10	[3/8"]	22~ 70
-12	12		23~ 85
-1/2		[1/2"]	
-16	16	[5/8"]	26~ 90
-20	20	[3/4"]	37~100
-25	25		40~100
-1"		[1"]	

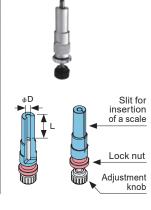

#### Holder Stand

The stand for the SLIMLINE collet, straight arbor and small shank holders (HSK-E25 and E32) is available in four colors, enabling simple color-coding

 
CODE	Color	Front face	Back face	max.Q'ty
SDKT-RE	RED			
-BL	BLUE	SLIMLINE collet	Small shank holders	25 pieces
-GR	GREEN	STRAIGHT arbor	(HSK-E25 / E32)	each
-GD	GOLD		(11011 = 207 = 02)	

Size:190×190 (mm)










Use HSB to set cutting

tool projection length, for regular cutters. Stopper(HSB type)


L+2mm

(Cutter projection)

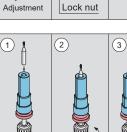

(2)

 (3)



(4)

HSB

### ■ Cleaning tools

#### Brush type

Nylon brushes for internal bores cleaning.

CODE I.D	
AQC-BR -SET	3 [1/ 8"], 4 [3/16"], 6 [1/4"], 8 [5/16"], 10 [3/ 8"], 12 [1/2"], (1 of each. 6 pieces in total)
-BR 3-5	3 [1/ 8"], 5 pcs.
-BR 4-5	4 [3/16"], 5 pcs.
-BR 6-5	6 [1/ 4"], 5 pcs.
-BR 8-5	8 [5/16"], 5 pcs.
-BR10-5	10 [3/ 8"], 5 pcs.
-BR12-5	12 [1/ 2"], 5 pcs.



■Caution

Do not use when holder is hot.

#### Rubber grinding stone type

To eliminate strong oxidized film and burned-in dust and oil that have been generated in the internal bores.

#### Standard set

CODE	NOTE
CLT-GTA-01	1 ea. of right model
Parts	

CODE	NAME	φd	Q'ty
CLT-GTA-GP	Grip	_	1
-GTA 3-5		3	5
-GTA 4-5	Rubber	4	5
-GTA 6-5	grindstone	6	5
-GTA 8-5	-	8	5
-GTA10-5		10	5





### Aqua Cool

#### Aqua cool kit


Cooling kit for cooling SLIMLINE holders after shrink fitting or removing.

CODE	NOTE
AQC-KIT-01	1 ea. for below model

#### **Parts**

CODE	NAME	NOTE
AQC-EK-01-2	Special Liquid	2ℓ of undiluted Solution, Use at a dilution ratio of 3%.
-AT-01	Aqua Tray	Drainer plate
-AH-01	Adapter Hanger	Hanger for lowering holders into liquid.
CN -245	Container Box	Size:424×291×245 (364×242×230) mm
-FT	Lid for Container Box	Size:421×288×35mm

( ) inside dimension

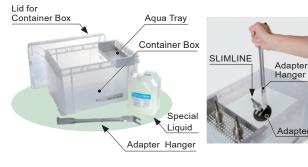

745

570

### ■ A shrink-fitting work efficiency kit, Shrink-fit holder Chiller

Shrink fitting operation can be shortened. Installation is easy as no power supply is required. All MST's heating devices are available.

Cooling tower

Stopper

ring

#### A type

CODE	Cooling tower	Kg
CWBA01	1 pc.	18
CWBA02	2 pcs.	25

#### ■Std. Access.

- Slide table
- Slide type base(3 pcs.)
- Stopper ring(6 pcs.)
- Thermo seal(7 pcs.)
- Connecting air tube (dia.8mm, length 2m)


#### ■Note

- Compressed air required: 0.5MPa (air-consumption volume: 245 l/min)
- Please connect the air line that came with the unit. (Supply air pressure: 0.5~0.7MPa)

# REPLACEMENT PARTS





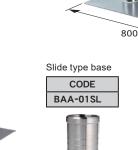


CWBA01

Adapter (option)

Slide type base

Slide table



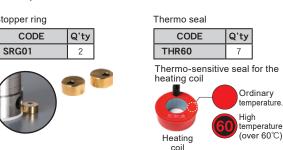

CWBA02

(Installed 2 cooling towers)

#### C type (For HEAT ROBO Baby 3000S/1200S)

Compact type that can be installed in tight spots.

- 1 71		
CODE	Kg	
CWBB01	7.3	

#### ■Std. Access.

B type

- Thermo seal(7 pcs.)
- Connecting air tube (dia.8mm, length 2m)

### ■Note

- •Compressed air required : 0.5MPa
- (air-consumption volume : 245l/min)
   Please connect the air line that came with the unit.

(Supply air pressure : 0.5~0.7MPa)

